


3PDT Foot Switch

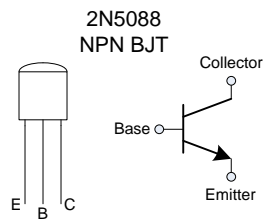

2N5088  
NPN BJT

**MOD**<sup>®</sup>

[www.modkitsdiy.com](http://www.modkitsdiy.com)

Copyright © 2018 by modkitsdiy.com

**"The Penetrator" (K-996)  
Schematic**