

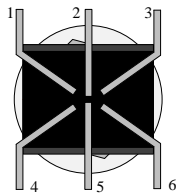


DPDT Foot Switch

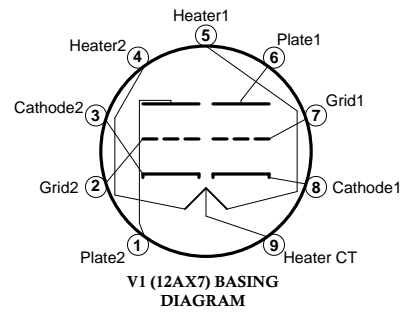

BS170  
N-Channel  
MOSFET



**MOD**<sup>®</sup>

www.modkitsdiy.com

Copyright © 2010 by modkitsdiy.com

**"The Persuader" (K-930)  
Schematic**