AC Voltages measured from strat on bridge position strumming an open E chord. Dwell and Reverb controls set at half-way.

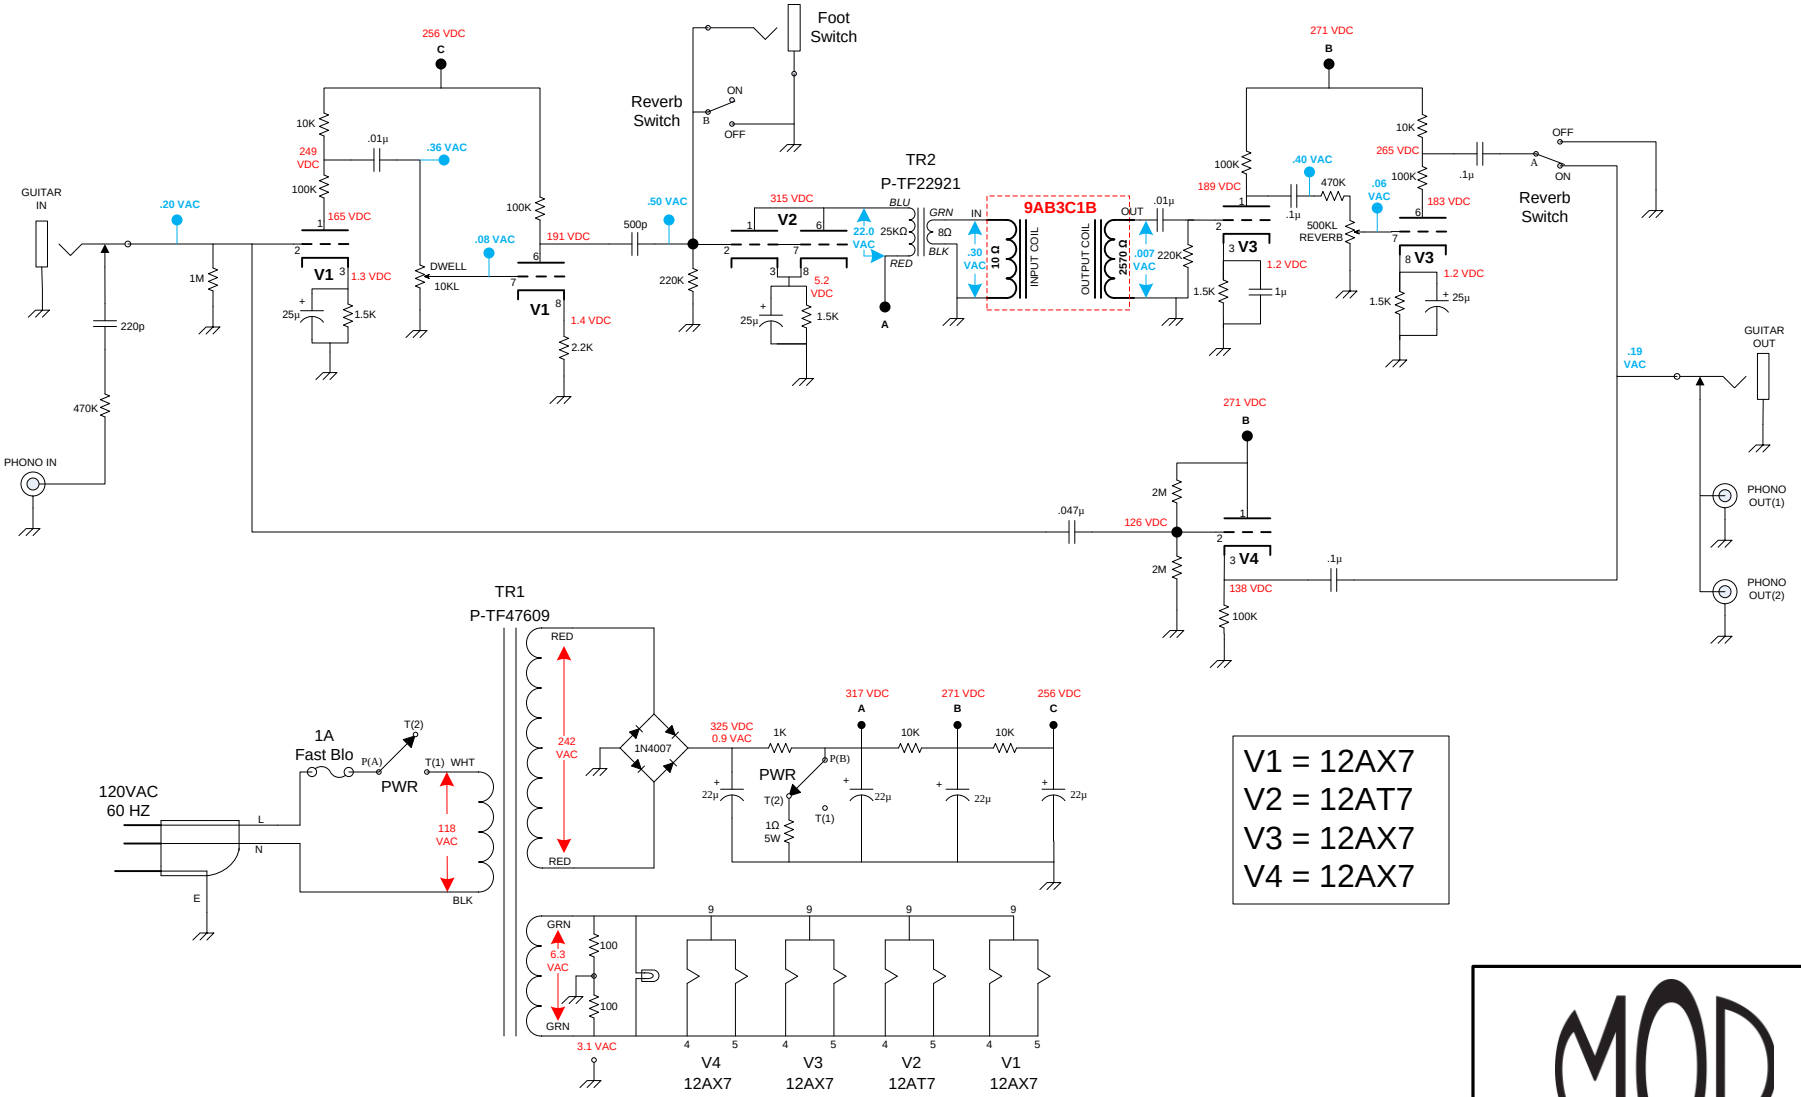

V1 = 12AX7
V2 = 12AT7
V3 = 12AX7
V4 = 12AX7

MOD®

www.modkitsdiy.com

Copyright © 2014 by modkitsdiy.com

"The Wave" (K-MOD103) Schematic